

STEREOPING

E-Mail hello@stereoping.com
 Internet www.stereoping.com

The Stereoping Synth Controller shares the same hardware for all editions. You can safely try out other editions if you own a suitable synthesizer. The on-board CPU allows about 10.000 firmware flashings until it starts to die, you can safely try out each edition multiple times.

- Print this sheet without scaling
- Use a sharp cutter or scalpel to cut out the 19 holes. Take care not to cut your fingers!
- Pin the printout on your controller using adhesive tape or a removable glue like fixogum/rubber cement
- Get the new firmware from <http://www.stereoping.com/synth-controller-downloads/?lang=en>
- Flash the suitable firmware in your controller as described in the manual: hold upper button while powering on (middle LED goes on), use a SysEx-dump tool like e.g. midiOx to send the new firmware into the midi-in-jack

MIDI IN MIDI OUT DC 9V - +

Synth Controller 1016R STEREOPING

PORTA **TRACK**

OFF BOTH

VOLUME **CUTOFF** **RESO**

7 11 12

OSC MIX 13
VCF KEYMODE 26
VCF INIT FM 39

CONST. TIME **EXPO. SPEED**
 SOFT MED

CONST. SPEED **EXPO. TIME**
 OFF HARD

DCO 1 **FREQ** 14 **SHAPE** 15 **PULSE** 16 **SELECT** 17 **LFO 1 AMT** 18 **SYNC** 19

ENV 1 **A** 27 **D** 28 **S** 29 **R** 30 **ENV 1 VCF AMT** 31 **LAG MODE** 32

ENV 3 **A** 40 **D** 41 **S** 42 **R** 43 **ENV 3 VCF FM AMT** 44 **CC #2**

DCO 2 **FREQ** 20 **SHAPE** 21 **PULSE** 22 **SELECT** 23 **LFO2 PWM AMT** 24 **DETUNE** 25

ENV 2 **A** 33 **D** 34 **S** 35 **R** 36 **PORTA KEYMODE** 37 **PORTA RATE** 38

LFO 1 **SPEED** 45 **WAVE** 46 **AMPL** 47 **LFO 2** **SPEED** 48 **WAVE** 49 **GLB DETUNE / PRS** 94