

STEREOPING

E-Mail hello@stereoping.com
 Internet www.stereoping.com

The Stereoping Synth Controller shares the same hardware for all editions. You can safely try out other editions if you own a suitable synthesizer. The on-board CPU allows about 10.000 firmware flashings until it starts to die, you can safely try out each edition multiple times.

- Print this sheet without scaling
- Use a sharp cutter or scalpel to cut out the 19 holes. Take care not to cut your fingers!
- Pin the printout on your controller using adhesive tape or a removable glue like fixogum/rubber cement
- Get the new firmware from <http://www.stereoping.com/synth-controller-downloads/?lang=en>
- Flash the suitable firmware in your controller as described in the manual: hold upper button while powering on (middle LED goes on), use a SysEx-dump tool like e.g. midiOx to send the new firmware into the midi-in-jack

Synth Controller SUPER QUARTZ MIDI IN MIDI OUT DC 9V **STEREOPING**

2 BASS
3 CHORD (HOLD: ALT PARAMETER BOTH: SEND INIT PATCH)
1 MELODY

DCO

RANGE: SAW, SQ, OFF, SHAPE (11, 22, 40)
PWM: MAN, LFO (24, 42), SUB LEVEL (25, 43)
NOISE: OFF, ON (26, 44)

VCF

HP: OFF, ON (13, 27, 45)
CUTOFF (13, 27, 45)
RESO (14, 28, 46)
KEYTRACK (15, 29, 47)
LFO (30, 48)
ENV (16, 31, 49)

LFO

DELAY (33, 51)
RATE (32, 50)

ENVELOPE

ATTACK (17, 34, 52)
DECAY (18, 35, 53)
SUSTAIN (19, 36, 54)
RELEASE (20, 37, 55)

VCA

CHORUS: OFF, ON (F, A, FA)
DYNAMICS (38, 56)
VCA: GATE, ENV (21, 39, 57)
LEVEL (21, 39, 57)